

Accessories program

Lubricating-, Refill- and Prefill Nipples

 
1. Introduction

There are several fill- and one lubricating nipple available. These parts are used to fill and refill the lubricators or to clean grease lines of installations respectively.

2. Technical data

Working temperature: -20° C to +55° C

Packing unit: 10 pieces

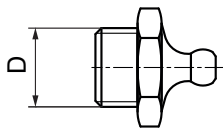

290-30110 Lubricating nipple R1/4"

Dimensions:


Article No.	D [mm]	Weight [g]	Material
290-30110	R1/4"	13	nickel-plated brass
290-30120	G1/4"	19	nickel-plated brass
290-30130	R1/4"	3	plastic
290-30140	R3/8"	5	plastic
290-30150	G1/4"	x	nickel-plated brass

3. Applications

290-30110 Lubricating nipple

Screw the lubricating nipple on the lubricating point. Add the grease gun (Art. no. 290-30100) and clean the grease lines with some pushes.

 Caution! Do not grease too much. Unscrew the lubricating nipple 290-30110, screw on the lubricator and start.

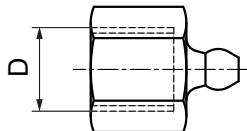

290-30120 Refill nipple G1/4"

 
290-30120 Refill nipple

Screw the refill nipple 290-30120 on the lubricator. Press the grease into the lubricator with the grease gun (Art. no. 290-30100) until the piston has reached the back position.

Caution! Do not overfill. If too much grease is pressed into the lubricators they may break on the funnel.

Accessories program

Lubricating-, Refill- and Prefill Nipples

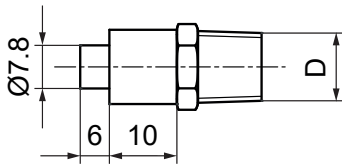

290-30130 / 290-30140 Connecting nipple

The connecting nipples can be attached to a filling station. With the opening on the funnel the lubricators are pressed over the cylindric outside of the nipples. Afterwards the grease can be dosed into the lubricator. When the lubricator is filled, pull it off the nipple and place the next lubricator on the filling station.



290-30130 Connecting nipple R1/4"

290-30150 Refill nipple

Fill the IMPULSE with the help of a grease gun and filling nipple 290-30150 until lubricant emerges at the end of the thread.

 
 
Attention! The pressure must never be higher than 2 bar when filling.



290-30140 Connecting nipple R3/8"

4. Note

- Please refer also to the instructions for filling and refilling the simalube lubricant dispensers.

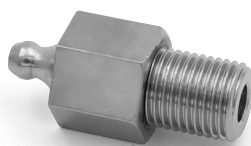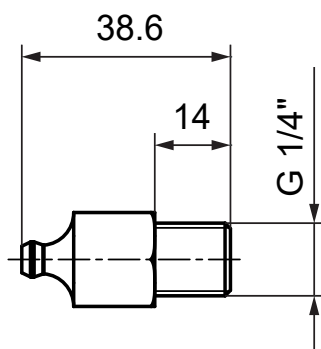

290-30150 Prefill nipple G1/4"