


Accessories program

Mounting Support, Protective Cover and Mounting Bracket

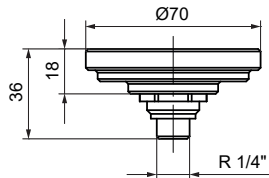


290-20800 Mounting support

1. Introduction

In order to protect the simalube lubricator against damage caused by external influences, it is recommended to use the mounting support with protective cover. The mounting support supports the lubricator at the funnel and thus prevents damage caused by heavy vibrations. The mounting support consists of a plastic part and a nipple and counter nut.

The protective cover is the ideal addition to the mounting support if the lubricator should be protected against knocks, impact, etc. The cover is easily mounted on the mounting support with a bayonet catch. Thanks to the diagonal slits in the cover, the piston position can be monitored at all times without having to remove the cover. The opening on the top of the cover allows to read off and, if necessary, correct the set dispensing time.

The brackets are an easy way to fasten simalube lubricators in combination with the mounting support and, if necessary, the protective cover. Three types of bracket are available, 1fold, 3fold and 5fold.

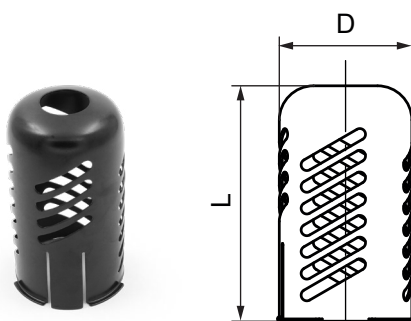

290-20810 Protective cover (for 30, 60, 125 ml)


2. Technical data

2.1 Mounting support

Working temperature: 70° C
Packing unit: 1 piece

Dimensions:

Article No.	D [mm]	D1 [mm]	L [mm]	L1 [mm]	Weight [g]	Material
290-20800	R1/4"	70	36	18	44	PA, brass nickle-plated

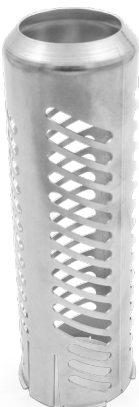

290-20850 Protective cover (for 250 ml)

2.2 Protective cover


Packing unit: 1 piece

Dimensions:

Article-No.	D [mm]	L [mm]	Weight [g]	Material
290-20810	58	105	89	steel
290-20850	58	195	186	stainless steel

Accessories program

Mounting Support, Protective Cover and Mounting Bracket

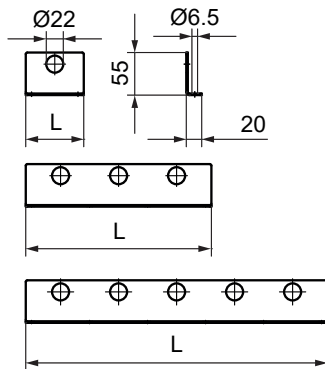

2.3 Mounting brackets to mounting support

Packing unit: 1 Stk.

Masstabelle:


Article-No.	Assembly points	L [mm]	Weight [g]	Material
290-20820	1	75	80	steel, gunmetal finished
290-20830	3	240	252	steel, gunmetal finished
290-20840	5	390	412	steel, gunmetal finished



290-20820 Mounting bracket, 1-fold



290-20830 Mounting bracket, 3-fold

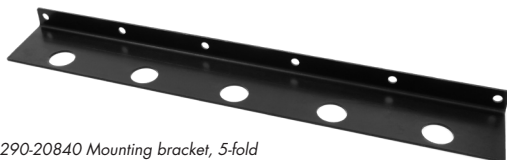

290-20840 Mounting bracket, 5-fold

3. Installation and start-up

3.1 Mounting support

1. Screw lubricator into mounting support, ensuring that the lubricator is lying properly on the funnel.
2. Screw support with lubricator into the lubrication point.
3. Set dial to required dispensing time.

3.2 Mounting support with protective cover

- 1 - 3 as above
4. Snap protective cover into mounting support (bayonet catch)

3.3 Brackets

1. Screw on bracket in the required position.
2. Unscrew counter nut SW 24 on mounting support.
3. Tighten mounting support on the bracket with the counter nut.
4. Screw lubricator into mounting support, ensuring that the dispenser is lying properly on the funnel.
5. Set dial to required dispensing time.
6. Mount protective cover if required.

Important

- Even though the mounting support, protective cover and brackets can be used in higher temperatures, ambient temperature must not exceed +55 °C! (maximum temperature for simalube lubricators)