


## Accessories Program

### Manifold adapter for simalube lubricators

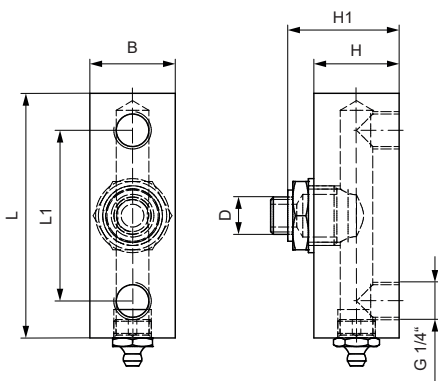

2-fold adapter

#### 1. Introduction

The manifold adapters for simalube lubricant dispensers are mounting parts into which several lubricant dispensers can be screwed and activated simultaneously. The systems, which have been specially developed for large quantities of lubricant, offer the following advantages:

- Supply the lubrication point with lubricant for a maximum duration of 12 months
- The manifold adapters can be re-used several times
- Compatible with all lubricant dispensers manufactured by simatec
- Thread connection (D) optionally available with G 1/4" or G 1/2"

#### 2. Technical Data

##### 2.1 2-fold adapter

Material: POM-C  
Operating temperature: -20° C to +55° C  
Packing unit: 1 pc.

Dimensions:


| Artikel No. | L<br>[mm] | B<br>[mm] | H<br>[mm] | D<br>[mm] | L1<br>[mm] | H1<br>[mm] | Weight<br>[g] |
|-------------|-----------|-----------|-----------|-----------|------------|------------|---------------|
| 290-41020   | 86        | 30        | 30        | G 1/2"    | 60         | 35.5       | 135           |
| 290-41030   | 86        | 30        | 30        | G 1/4"    | 60         | 35.5       | 132           |

##### 2.2 4-fold adapter

Material: POM-C  
Operating temperature: -20° C to +55° C  
Packing unit: 1 pc.

Dimensions:

| Artikel No. | Da<br>[mm] | H<br>[mm] | D<br>[mm] | Dc<br>[mm] | H1<br>[mm] | Weight<br>[g] |
|-------------|------------|-----------|-----------|------------|------------|---------------|
| 290-41000   | 120        | 25        | G 1/2"    | 84         | 37.5       | 400           |
| 290-41010   | 120        | 25        | G 1/4"    | 84         | 37.5       | 396           |

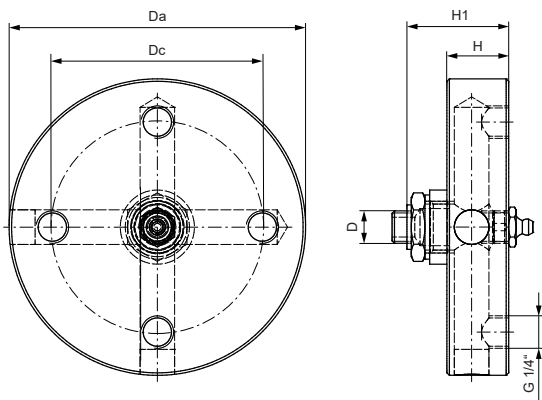

4-fold adapter

## Accessories Program

### Manifold adapter for simalube lubricators

#### 3. Installation and start-up

1. Screw in lubricating nipple.
2. Screw in the reducing nipple. Make sure that the seal rings are fitted.
3. Use the grease gun to pre-fill the bores of the adapter with grease via the grease nipple. Use the same grease as in the lubricant dispensers!
4. Screw the simalube lubricant dispensers into the adapter.
5. Screw the fully assembled device into the lubrication point or use a suitable mounting method. If necessary, connect a hose line to the lubrication point. Use the hose item no. 290-20000 for this.
6. Start up the lubricant dispensers. Activate the dispensers on the drive head using a screwdriver or a coin and set the required dispensing time (in months).

#### 4. Note

##### ■ Important!

Start all lubricators at the same time with the same setting