

Accessories Program

Mounting brackets

1. Introduction

Various mounting brackets are available for installing simalube lubricators. The brackets can be easily mounted using magnets (Art. No. 290-20190) or screws


2. Technical Data

Working temperature: -20° C to +55° C

Packing unit: 1 Stk.

Dimensions:

Article No.	L [mm]	B [mm]	H [mm]	Weight [g]	Assembly- points	Material
290-28000	84	60	50	65	1	steel, burnished
290-20820	75	55	20	80	1	steel, burnished
290-20830	240	55	20	252	3	steel, burnished
290-20840	390	55	20	412	5	steel, burnished
290-20870	20	31	20	15	1	stainless steel

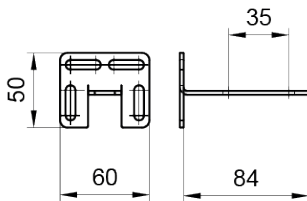

290-28000 Bracket, universally adjustable

3. Bracket, universally adjustable

3.1 General

When the lubricator is mounted using the universally adjustable support (290-28000), the position of the lubricator can be adjusted in all directions. This is particularly useful when brushes are used. For example, if the bristles become slightly worn, the brush position can be readjusted.

3.2 Mounting with brush

Between the lubricator and the brush, the bulkhead fitting 290-10450 or 290-10460 is installed. Thanks to the use of the support and the bulkhead fitting, the brushes can be adjusted in all directions. The bulkhead fittings are available in two lengths


3.3 Note

The connection between the bulkhead fitting and the brush is self-sealing. If required, a seal (290-50800) must be installed between the bulkhead fitting and the lubricator, or the thread on the lubricator must be sealed with sealing tape.



Accessories Program

Mounting brackets

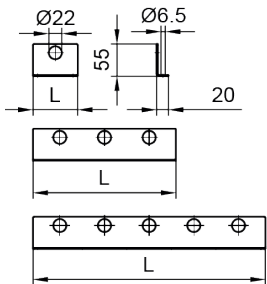

290-20820 Mounting bracket, 1-fold



290-20830 Mounting bracket, 3-fold



290-20840 Mounting bracket, 5-fold



4. Mounting bracket

4.1 General

The mounting bracket enables simple and clear installation of simalube lubricators. It is available in three versions: with one, three, or five assembly points for simalube lubricators.

4.2 Note

To mount simalube lubricators on the mounting bracket, the mounting nipple 290-10150 or the mounting support 290-20800 is required.

The mounting support stabilizes the lubricator at the funnel, thereby preventing damage that may occur due to strong vibrations

5. Bracket for simalube 15-60 ml

5.1 General


The mounting bracket 290-20870 is especially suitable for installing single simalube lubricators in sizes 15, 30, and 60 ml in confined spaces.

5.2 Note

To mount the simalube lubricators on the mounting bracket, the bulkhead fitting 290-10450 or 290-10460 is required.

Important

- Although the universally adjustable bracket, the mounting bracket, and the bracket for simalube 15-60 ml can withstand higher operating temperatures, the ambient temperature must not exceed +55 °C (the maximum allowable temperature for simalube lubricators).

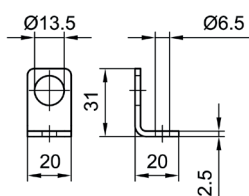

290-20870 Bracket for simalube 15-60 ml